


# Mounting template - Tension feet



**Mount the fixing plates by use of the mounting template.**

**Attention:** In order to avoid any glass damage, a minimum distance to the pane has to be kept!

Transparent fabric min. 3 mm ventilation distance.


Blackout fabric min. 5 mm ventilation distance.

Honeycomb fabric min. 20 mm ventilation distance.

(Special glass may according to instructions from the manufacturer require bigger distance).


**1. Push the fixing plate into the mounting template.**

**Attention:** +5 and +3 respectively is the requested minimum distance to the pane (ventilation distance).

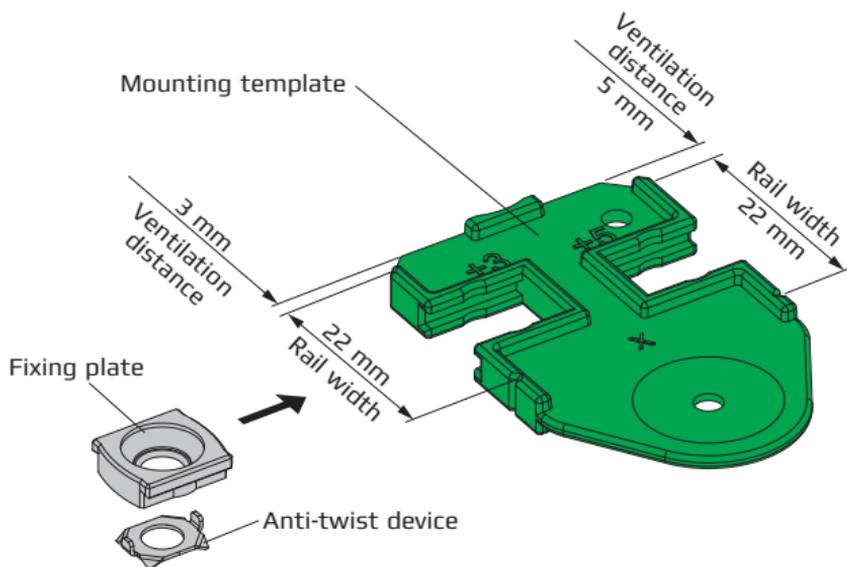

**2. Position the mounting template on the glazing bead (directly against the pane).**


**3. Pre-drill and fix the fixing plates.**

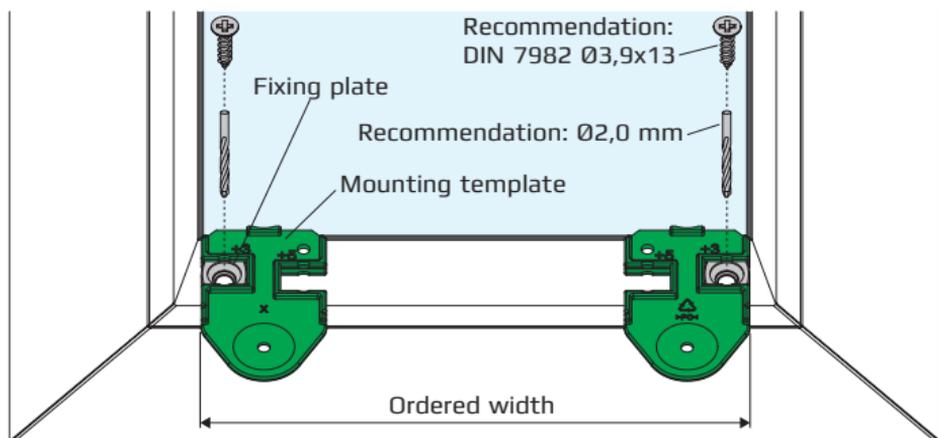


**4. Pull the mounting template from the fixing plate.**

# Mounting template - Tension feet


**Mount the tension feet individually  
(to the front edge of the glazing bead edge)**

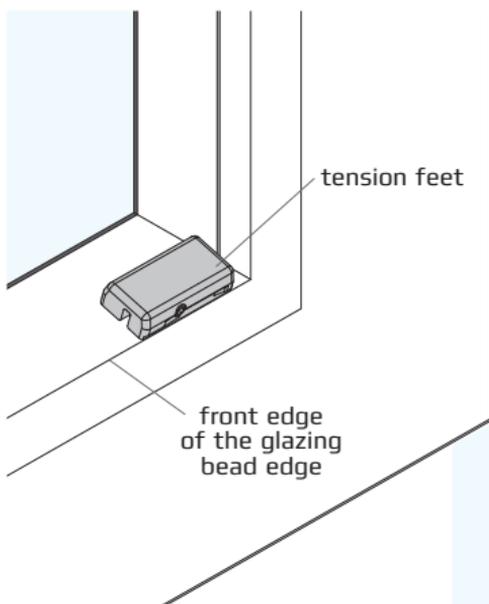

**1. Position the mounting template and drill the mounting hole**

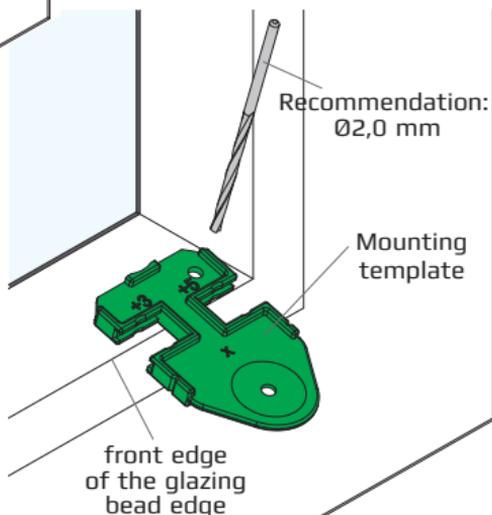

**2. Screw on the fixing plate**

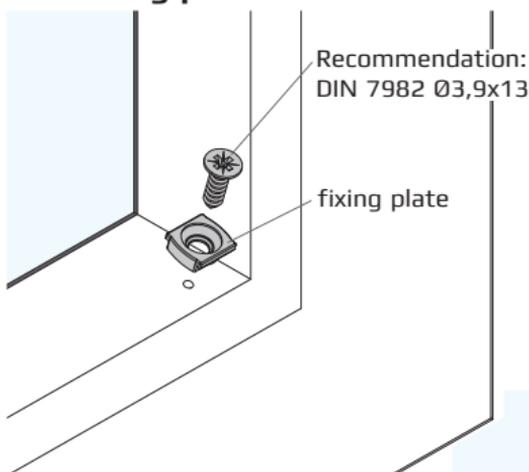

**3. Fixing the tension feet**

