



Attach the control rod to the operating handle.

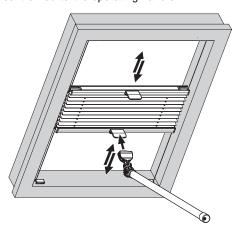

# **Locking**Click the operation profile over the tension cord bracket

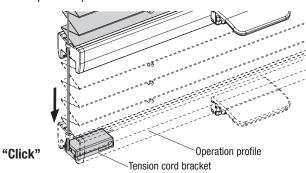


Thanks to a special manufacturing process, our fabric qualities are furnished with an antistatic finish and are therefore resistant to dust and dirt. Occasional brushing with a soft brush or a feather duster is usually sufficient.

When cleaning glass and the window frame, make sure that no water or caustic cleaning agents come into contact with the pleated blind fabric.

No guarantee can be offered for damage to fabrics that is attributable to Condensation, cleaning agents or soiling by insects.

#### **Model 2615**

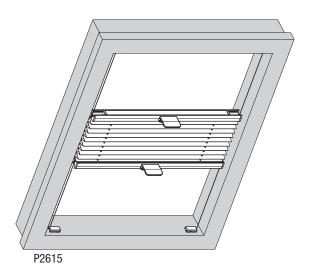

### Dear Customer,

this dimensionally accurate pleated blind was produced especially according to your requirements. High qualilty materials and a design that is perfect in function and elegance guarantee a long service lifetime and thus ensure great pleasure in the purchased product.

Your pleated blind Manufacturer



## Please read this intructions carefully before fitting the blind




Blinds must be fitted by skilled personnel.
Wrong installation may result in accidents.
Alterations of the blind must be approved by the blind manufacturer.

No screws for fixing are enclosed.


Always use appropriate screws and plugs suited for the wall or ceiling material where the blind is fitted!

## 1. Mount the fixing plates for the tension cord brackets

a) Determine the fixing plates' distance to the sides from the marking at the top and at the bottom. Place the pleated blind in the middle of the window and mark the ends on the left and on the right.

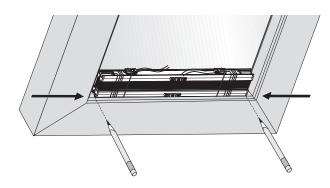


b) Push the fixing plate into the mounting template.





c) Depending on the window type and brand the distance to the front edge of the window is determined by use of the mounting template.

The window brands FAKRO and VELUX type GGU/GPU of an older generation with rounded front edge:




The profile distance from the front edge of the window must be 5 mm (hole distance 16 mm). Place the mounting template marked "+5" at the front edge.



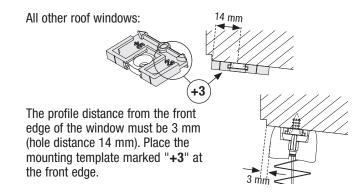


d) Place the mounting template - depending on the window type as already described - with "+5" or "+3" at the front edge of the window and the marking of the pleated blind width. Fix the fixing plates with the screws. Pull the mounting template away.

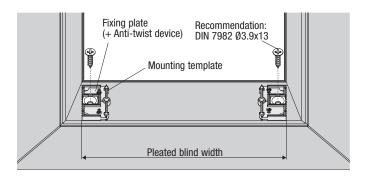


### 2. Mount the pleated blind


 a) Remove rubber band and unwind the cord incl. tension cord bracket.

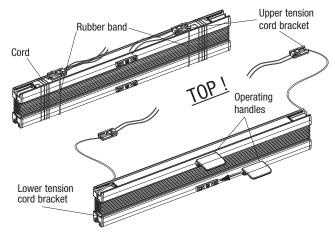

 b) Push the upper tension cord brackets over the fixing plates until they lock.



c) Take the lower tension cord brackets out of the rail and push them over the fixing plates until they lock.

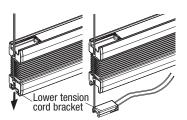

After having checked that the pleated blind functions as prescribed, the excess cord ends can be cut off.



Attention: Adjustment of the cord tension must be uniform and may only be made by a professional.